


Instructions for telephone socket

Wiring method: To align the core within the colored wires of the telephone cables with the wiring number marked on the module, to connect the inner core within the wire with the SS circlips within the module by pressing the cover plate.

	Wiring number with color code					
Six core	1 Grey	2 Yellow	3 Green	4 Red	5 Black	6 Blue
Four core		2 Yellow	3 Green	4 Red	5 Black	

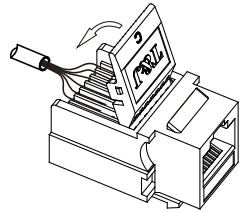

Instructions for data socket

Wiring method: Align each colored wire core with the A or B color code card slot marked on the module at the same time, and press down the cover plate to connect the wire core with the stainless steel spring in the module.

